


**Originalfernbedienung    Ersatzfernbedienung**

	Audio		Dual
	[ ]		Format
	Power		Power
	[ * ]/SV		Subt
	V≡/LP		Options
	[≡I ]/000		Guide
	Mute/Timer		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0

**Originalfernbedienung    Ersatzfernbedienung**






 

 

 

 



 



 

 


 

 


 
 



	T		Smart
	Pause		Pause
	M		Menu
	E		3D
	i		Info
	Rec		Rec
	Up		Up
	Right		Right
	Down		Down
	Left		Left
	OK		Ok
	Red		Red
	<<		<<
	Green		Green
	Stop		Stop
	Yellow		Yellow
	Play		Play



 




**Originalfernbedienung Ersatzfernbedienung**

	Mute/Timer		Mute
	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Up		Up
	Down		Down
	OK		Ok
	Right		Right
	Left		Left

**Originalfernbedienung Ersatzfernbedienung**

	<<		<<
	Stop		Stop
	Play		Play
	>>		>>
	Pause		Pause
	Rec		Rec
	M		Menu
	E		3D
	Audio		Dual
	[≡  ]/000		Guide
	V≡/LP		Options
	[ ]		Format
	[ *]/SV		Subt
	T		Smart
	i		Info
	Red		Red
	Green		Green

 








 
 
 
 
 

 


 



 
 


 


 
 
 







**Originalfernbedienung    Ersatzfernbedienung**

	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	[ ]		Format
	Audio		Dual
	[ * ]/SV		Subt
	V≡/LP		Options
	[ =  ]/000		Guide
	Mute/Timer		Mute

**Originalfernbedienung    Ersatzfernbedienung**

	T		Smart
	M		Menu
	E		3D
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	<<		<<
	Stop		Stop
	Play		Play
	>>		>>
	Pause		Pause

