


 
 

 

 

 


 

 

 

 

 

 

 

 

 












 




 
 
 

 
 

 





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	TV		TV/R
	Audio		Shift + TV/R
	Clock /Pop-Up M.		Smart
	->[]<- / Zoom		Eject
	Sound		Dual
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0 / AV		0


 

 





 
 

 
 
 
 
 
 


Originalfernbedienung Ersatzfernbedienung

	EPG		Guide
	Media		Media
	Pip/[]		3D
	Text / Disc M		Text
	Text / Disc M		D. Menu
	Menu		Menu
	End		Back
	Info		Info
	Vol+		Vol +
	Vol-		Vol -
	Up		Up
	Left		Left
	OK		Ok
	Right		Right
	Down		Down
	P+		Ch +
	P-		Ch -





Originalfernbedienung Ersatzfernbedienung



 

 


 

 

 

 



 

 

 

 

 







 
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue/Marker		Blue
	<<		<<
	Play		Play
	>>		>>
	Rec		Rec
	Pause		Pause
	Stop		Stop

Originalfernbedienung Ersatzfernbedienung






 

 
 
 
 


 
 

 
 
 

 


 

 

 
 









Originalfernbedienung Ersatzfernbedienung









	Power		Power
	Pop-Up-M		Smart
	→[]← / Zoom		Eject
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0/AV		0
	EPG		Guide
	Media		Media
	PIP/[]		3D
	Text / Disc-M		Text

Originalfernbedienung Ersatzfernbedienung

	Text / Disc-M		D. Menu
	Menu		Menu
	End		Exit
	Info		Info
	Up		Up
	Left		Left
	OK		Ok
	Right		Right
	Down		Down
	P+		Ch +
	P-		Ch -
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue/Marker		Blue
	<<		<<
	Play		Play





 

 


 

 

 

 



 

 

 

 

 







 


Originalfernbedienung		Ersatzfernbedienung		Originalfernbedienung		Ersatzfernbedienung	
	>>		>>				
	Rec		Rec				
	Pause		Pause				
	Stop		Stop				






 

 
 
 
 


 
 

 
 
 

 


 

 

 
 









Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Pop-Up-M		Smart
	→[]←/Zoom		Format
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0/AV		0
	EPG		Guide
	Media		Media
	PIP/[]		3D
	Text / Disc-M		Text









Originalfernbedienung Ersatzfernbedienung

	Text / Disc-M		D. Menu
	Menu		Menu
	End		Exit
	Info		Info
	Up		Up
	Left		Left
	OK		Ok
	Right		Right
	Down		Down
	P+		Ch +
	P-		Ch -
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue/Marker		Blue
	<<		<<
	Play		Play





Originalfernbedienung Ersatzfernbedienung




 
 

 

 

 


 

 

 

 

 

 

 

 

 




	>>		>>
	Rec		Rec
	Pause		Pause
	Stop		Stop

Originalfernbedienung Ersatzfernbedienung





 

 
 
 

 
 




 
 




Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	TV		TV/R
	Audio		Shift + TV/R
	Pop-Up M		Smart
	Zoom		Eject
	Sound		Dual
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0 / AV		0


 


















Originalfernbedienung Ersatzfernbedienung

	EPG		Guide
	PIP/[]		3D
	Media		Media
	Text / Disc M		Text
	Text / Disc M		D. Menu
	Menu		Menu
	End		Back
	Info		Info
	OK		Ok
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Vol+		Vol +
	Vol-		Vol -
	P+		Ch +
	P-		Ch -





Originalfernbedienung Ersatzfernbedienung

	Red		Red
	Green		Green
	Yellow		Yellow
	Blue/Marker		Blue
	Play		Play
	Pause		Pause
	Stop		Stop
	Rec		Rec
	<<		<<
	>>		>>

Originalfernbedienung Ersatzfernbedienung

