

 

 




 
 
 





 
 







 

 


 





 
 

 

 

 
 
 

 




 

 

 





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Home		Smart
	Home		Ok
	Search		TV/R
	Sleep		Sleep
	Rew		<<
	Rew		I<<
	Fwd		>>
	Fwd		>>I
	Pause		Pause
	Play		Play
	Up		Up
	Left		Left
	Right		Right
	Down		Down
	Volume+		Vol +
	Volume-		Vol -

Originalfernbedienung Ersatzfernbedienung

	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Shuffle		D. Menu
	Repeat		Text
	More		Info
	Now Playing		Media
	Favorites		Pre Ch

