








 



 



 









 





 







 



 



 
 



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Input		AV
	1		1
	2		2
	3		3
	Open		Eject
	4		4
	5		5
	6		6
	Play		Play
	Pause		Pause
	7		7
	8		8
	9		9
	Stop		Stop
	0		0
	-/--		Guide

Originalfernbedienung Ersatzfernbedienung

	Return		Back
	Mute		Mute
	Vol-		Vol -
	Vol+		Vol +
	CH+		Ch +
	Up		Up
	Left		Left
	OK		Ok
	Right		Right
	Sys Menu		Menu
	CH-		Ch -
	Down		Down
	Sys Exit		Exit
	Picture		Format
	Sound		Dual
	Sleep		Sleep
	Display		Info



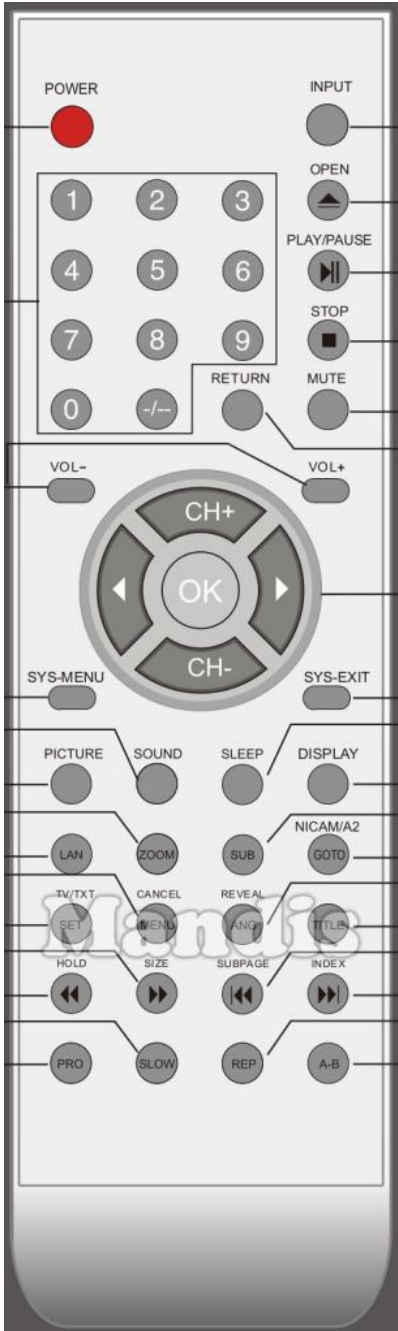

Originalfernbedienung Ersatzfernbedienung

[LAN]	LAN	[SHIFT] + [SOUND DUAL]	Shift + Dual
[ZOOM]	Zoom	[SHIFT] + [ZOOM]	Shift + Eject
[SUB]	SUB	[AD SUBT]	Subt
[NICAM/A2 GOTO]	GOTO /	[HOME SMART]	Smart
[TV/TXT SET]	SET / TV/TXT	[SETTINGS OPT]	Options
[CANCEL MENU]	Menu / Cancel	[E-MANUAL D.MENU]	D. Menu
[REVEAL ANG]	Ang / Reveal	[ECO 3D]	3D
[TITLE]	Title	[DISC NAV LIST]	List
[HOLD]	<< / Hold	[<<]	<<
[SIZE]	>> / Size	[>>]	>>
[SUBPAGE]	I<< / Subpage	[<<]	I<<
[INDEX]	>>I / Index	[>>]	>>I
[PRO]	Red / Pro	[A]	Red
[SLOW]	Green / Slow	[B]	Green
[REP]	Yellow / Rep	[C]	Yellow
[A-B]	Blue / A-B	[D]	Blue

Originalfernbedienung Ersatzfernbedienung

