
 

 




Originalfernbedienung    Ersatzfernbedienung

|   |            |   |         |
|---|------------|---|---------|
|    | Power      |    | Power   |
|    | #          |    | D. Menu |
|    | Open/Close |    | Eject   |
|    | Mute       |    | Mute    |
|    | Input 1    |    | AV      |
|    | 1          |    | 1       |
|    | 2          |    | 2       |
|    | 3          |    | 3       |
|    | Input 2    |    | 3D      |
|    | 4          |    | 4       |
|    | 5          |    | 5       |
|    | 6          |    | 6       |
|  | 7          |  | 7       |
|  | 8          |  | 8       |
|  | 9          |  | 9       |
|  | Tuner      |  | Media   |
|  |            |  | Format  |

Originalfernbedienung    Ersatzfernbedienung

|   |                    |   |       |
|---|--------------------|---|-------|
|    | 0                  |    | 0     |
|    | zz                 |    | Sleep |
|    | DVD                |    | Smart |
|    | Menu               |    | Menu  |
|    | [-]                |    | Subt  |
|    | Exit               |    | Exit  |
|    | I<<                |    | I<<   |
|    | >>I                |    | >>I   |
|    | Tone               |    | Dual  |
|    | Mode               |    | List  |
|    | Up / Tune+ /       |    | Up    |
|    | Up / Tune+ /       |    | >>    |
|  | Vol+               |  | Vol + |
|  | Left               |  | Left  |
|  | Preset / Play / OK |  | Ok    |
|  | Right              |  | Right |
|  | Vol-               |  | Vol - |




**Originalfernbedienung**
**Ersatzfernbedienung**

|   |                      |   |        |
|---|----------------------|---|--------|
|  | Down / Tune- /       |  | Down   |
|  | Down / Tune- /       |  | <<     |
|  | Stop / FM Mode       |  | Stop   |
|  | Stop / FM Mode       |  | Red    |
|  | Pause                |  | Pause  |
|  | RDS Search           |  | TV/R   |
|  | RDS Search           |  | Green  |
|  | Repeat / RDS Display |  | Text   |
|  | Repeat / RDS Display |  | Info   |
|  | Repeat / RDS Display |  | Yellow |
|   |                      |   |        |
|   |                      |   |        |
|   |                      |   |        |
|   |                      |   |        |
|   |                      |   |        |
|   |                      |   |        |
|   |                      |   |        |

**Originalfernbedienung**
**Ersatzfernbedienung**

|  |  |
|--|--|
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |

