

 

 







 



 



 







 

 

 




**Originalfernbedienung Ersatzfernbedienung**

|   |            |   |                       |
|---|------------|---|-----------------------|
|    | Power      |    | Power                 |
|    | Open/Close |    | Eject / Surround      |
|    | 1          |    | 1                     |
|    | 2          |    | 2                     |
|    | 3          |    | 3                     |
|    | Subtitle   |    | Subtitle / EQ         |
|    | 4          |    | 4                     |
|    | 5          |    | 5                     |
|    | 6          |    | 6                     |
|    | Language   |    | Audio / Lang I/II     |
|   | 7          |   | 7                     |
|  | 8          |  | 8                     |
|  | 9          |  | 9                     |
|  | OSD        |  | Display / Media       |
|  | 0/10       |  | 0                     |
|  | 10+        |  | Guide / EPG / -/--    |
|  | Clear      |  | Exit / Cancel / Clear |

**Originalfernbedienung Ersatzfernbedienung**

|   |          |   |                       |
|---|----------|---|-----------------------|
|    | Prog     |    | TV/Radio /            |
|    | Setup    |    | Setup / OPT /         |
|    | Up       |    | Up                    |
|    | DVD/USB  |    | AV / Input / RDS      |
|    | DVD/USB  |    | Shift + 2             |
|    | DVD/USB  |    | Shift + 8             |
|    | Left     |    | Left                  |
|    | Enter    |    | OK                    |
|    | Right    |    | Right                 |
|    | Menu     |    | Menu / Home           |
|   | Down     |   | Down                  |
|  | Mute     |  | Mute / Dimmer         |
|  | <</Rev   |  | << / Tune-            |
|  | Stop     |  | Stop / Hold           |
|  | Play     |  | Play / Slow           |
|  | Pause    |  | Pause / Step / Freeze |
|  | I<</Prev |  | I<< / Preset-         |



