

 

 





 

 







 

 





 

 

 






Originalfernbedienung Ersatzfernbedienung

|   |          |   |                             |
|---|----------|---|-----------------------------|
|    | Power    |    | Power                       |
|    | Tv/Radio |    | TV/Radio /                  |
|    | Red      |    | Red / Netflix / Search      |
|    | Green    |    | Green / APP / Repeat        |
|    | Yellow   |    | Yellow / YouTube / Repeat   |
|    | Blue     |    | Blue / Prime Video / Random |
|    | FAV      |    | Fav / Marker / PC           |
|    | Text     |    | Text / Goto                 |
|    | Hold     |    | Shift + Stop /              |
|    | TVG      |    | Guide / EPG / -/--          |
|   | Subtitle |   | Subtitle / EQ               |
|  | Size     |  | Zoom / Size                 |
|  | Aspect   |  | Shift + Picture / Format    |
|  | Media    |  | Smart / List                |
|  | Subpage  |  | Eject / Surround            |
|  | Play     |  | Play / Slow                 |
|  | Pause    |  | Pause / Step / Freeze       |

 

 









 



 

 



 









 

Originalfernbedienung Ersatzfernbedienung

|   |           |   |                       |
|---|-----------|---|-----------------------|
|    | <<        |    | << / Tune-            |
|    | >>        |    | >> / Tune+            |
|    | Rec       |    | Rec / Rec Mode        |
|    | Stop      |    | Stop / Hold           |
|    | I<<       |    | I<< / Preset-         |
|    | Sleep     |    | Sleep / Timer         |
|    | >>I/Index |    | >>I / Preset+         |
|    | Audio     |    | Audio / Lang I/II     |
|    | Menu      |    | Menu / Home           |
|    | Exit      |    | Exit / Cancel / Clear |
|   | Up        |   | Up                    |
|  | Down      |  | Down                  |
|  | Right     |  | Right                 |
|  | Left      |  | Left                  |
|  | OK        |  | OK                    |
|  | Vol+      |  | Vol+                  |
|  | Vol-      |  | Vol-                  |



 





Originalfernbedienung Ersatzfernbedienung

|   |         |   |                            |
|---|---------|---|----------------------------|
|    | Mute    |    | Mute / Dimmer              |
|    | Display |    | Display / Media            |
|    | CH+     |    | CH+ / Page+                |
|    | CH-     |    | CH- / Page-                |
|    | 1       |    | 1                          |
|    | 2       |    | 2                          |
|    | 3       |    | 3                          |
|    | 4       |    | 4                          |
|    | 5       |    | 5                          |
|    | 6       |    | 6                          |
|   | 7       |   | 7                          |
|  | 8       |  | 8                          |
|  | 9       |  | 9                          |
|  | 0       |  | 0                          |
|  | -/--    |  | Shift + Guide / EPG / -/-- |
|  | Recall  |  | Back / Return              |
|  | Source  |  | AV / Input / RDS           |

Originalfernbedienung Ersatzfernbedienung

|   |        |   |                  |
|---|--------|---|------------------|
|  | P.Mode |  | Picture / Format |
|  | S.Mode |  | Sound / Title    |
|   |        |   |                  |
|   |        |   |                  |
|   |        |   |                  |
|   |        |   |                  |
|   |        |   |                  |
|   |        |   |                  |
|   |        |   |                  |
|   |        |   |                  |
|   |        |   |                  |
|   |        |   |                  |
|   |        |   |                  |
|   |        |   |                  |
|   |        |   |                  |
|   |        |   |                  |
|   |        |   |                  |
|   |        |   |                  |
|   |        |   |                  |

