





 

 
 

 
 
 
 

 




 
 
 

 
 
 
 
 
 
 
 
 
 
 




Originalfernbedienung Ersatzfernbedienung

	Standby		Power
	Open / Close		Eject
	Angle		Format
	Display / Info		Info
	Q-Play / TV/Radio		TV/R
	Q-Play / TV/Radio	 + 	Shift + Play
	P/N / EPG		Guide
	Search / TTX		Text
	Search / TTX	 + 	Shift + TV/R
	PBC / List		List
	Subtitle		Subt
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6

Originalfernbedienung Ersatzfernbedienung

	7		7
	8		8
	9		9
	0		0
	Random		Smart
	Audio		Dual
	Vol+		Vol +
	Vol-		Vol -
	Stop		Stop
	Play		Play
	Pause		Pause
	Red / Prev		Red
	Red / Prev		l<<
	Green / Next		Green
	Green / Next		>>l
	Yellow / REW		Yellow
	Yellow / REW		<<





Originalfernbedienung Ersatzfernbedienung

	Blue / FF		Blue
	Blue / FF		>>
	Setup		Options
	Return		Back
	Up / CH+		Up
	Up / CH+		Ch +
	Down / CH-		Down
	Down / CH-		Ch -
	Right		Right
	Left		Left
	Enter		Ok
	Title / Pg Up		Shift + Ch +
	Title / Pg Up		Media
	Menu / Pg Dn		Menu
	Menu / Pg Dn		Shift + Ch -
	Zoom / PVR		Shift + Eject
	Rec / Repeat		Rec

Originalfernbedienung Ersatzfernbedienung

	Rec / Repeat		Shift + Text
	A-B / FAV		Pre Ch
	Exit / Slow		Exit
	Video		Shift + AV
	Exit / Slow		Shift + >>
	Step		Shift + Pause
	DVD / DVB		AV
	Mute		Mute

