
 




**Originalfernbedienung Ersatzfernbedienung**

	Standby		Power
	Open / Close		Eject
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Goto		Guide
	Add / Clear		Exit
	<<		<<
	>>		>>
	Pause		Pause

**Originalfernbedienung Ersatzfernbedienung**

	Play		Play
	Stop		Stop
	I<<		I<<
	>>I		>>I
	Up		Up
	Left		Left
	Enter		Ok
	Right		Right
	Down		Down
	Setup		Options
	Navigat		Smart
	Title		List
	Menu		Menu
	Subtitle		Subt
	Angle		Format
	Source		AV
	Rec		Rec




**Originalfernbedienung    Ersatzfernbedienung**

TIMER	Timer	<b>SHIFT</b> + <b>TIMER</b>	Shift + AV
EDIT	Edit	<b>APP</b> <b>MEDIA</b>	Media
USB	USB	<b>A</b>	Red
DVD	DVD	<b>B</b>	Green
HDD	HDD	<b>C</b>	Yellow
DISC OPER	Disc Oper	<b>E-MANUAL</b> <b>D.MENU</b>	D. Menu
SLOW	Slow	<b>SHIFT</b> + <b>  </b>	Shift + Pause
RETURN	Return	<b>RETURN</b> <b>BACK</b>	Back
REPEAT	Repeat	<b>REPEAT</b> <b>TEXT</b>	Text
ZOOM	Zoom	<b>SHIFT</b> + <b>ZOOM</b>	Shift + Eject
CH+	CH+	<b>+</b> <b>CH</b>	Ch +
CH-	CH-	<b>CH</b> <b>-</b>	Ch -
P/N	P/N	<b>SEARCH</b> <b>TV/R</b>	TV/R
AUDIO	Audio	<b>SOUND</b> <b>DUAL</b>	Dual
VOL+	Vol+	<b>+</b> <b>VOL</b>	Vol +
L/P	L/P	<b>DISPLAY</b> <b>INFO</b>	Info
MUTE	Mute	<b>MUTE</b>	Mute

**Originalfernbedienung    Ersatzfernbedienung**

VOL-	Vol-	<b>VOL</b> <b>-</b>	Vol -

