


 



**Originalfernbedienung    Ersatzfernbedienung**

	Power		Power
	Source		AV
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	PR+		Ch +
	PR-		Ch -
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0

**Originalfernbedienung    Ersatzfernbedienung**

	TV		TV/R
	Recall		Pre Ch
	World		Media
	Menu		Menu
	Exit		Exit
	Back		Back
	i/Info		Info
	Guide		Guide
	[≡]/Text		Text
	*/O		Format
	*/O..		3D
	Lang		Dual
	[≡]..		Subt
	[-O-]		Options
	Red		Red
	Green		Green
	Yellow		Yellow





Originalfernbedienung		Ersatzfernbedienung		Originalfernbedienung		Ersatzfernbedienung	
	Blue		Blue				
	Rec		Rec				
	Play		Play				
	Stop		Stop				
	Pause		Pause				
	<<		<<				
	>>		>>				
	OK		Ok				
	Up		Up				
	Down		Down				
	Right		Right				
	Left		Left				
	Music/Photo/Movi		Smart				
	Q.Menu		D. Menu				

