





 
 







 
 














Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	TV / Radio		TV/Radio /
	0		0
	←PR		Back / Return
	EPG		Guide / EPG / -/--
	Up / PR+		Up
	Up / PR+		Shift + Up

Originalfernbedienung Ersatzfernbedienung

	Menu		Menu / Home
	Left / Vol-		Shift + Left
	Left / Vol-		Left
	OK / List		OK
	OK / List		Shift + OK
	Right / Vol+		Shift + Right
	Right / Vol+		Right
	Info		Info / Angle
	Down / PR-		Shift + Down
	Down / PR-		Down
	Exit		Exit / Cancel / Clear
	Red / Audio		Shift + Red / Netflix /
	Red / Audio		Red / Netflix / Search
	Page+		CH+ / Page+
	Yellow / Subtitle		Shift + Yellow / YouTube /
	Yellow / Subtitle		Yellow / YouTube / Repeat
	Page-		CH- / Page-





Originalfernbedienung	Ersatzfernbedienung
	Green / TXT
	+  Shift + Green / APP / REPEAT
	Green / APP / Repeat
	Pause / Step / Freeze
	Blue / Prime Video / Random
	Text / Goto
	Fav / Marker / PC
	Setup / OPT /
	D.Menu / Top
	Rec / Rec Mode
	Play / Slow
	Stop / Hold
	AV / Input / RDS
	<< / Tune-
	>> / Tune+
	+  Shift + << /
	+  Shift + >> /

Originalfernbedienung	Ersatzfernbedienung

