


















Originalfernbedienung Ersatzfernbedienung






 











On/Off		Power
Mute		Mute / Dimmer
Update		Play / Slow
Reveal		Pause / Step / Freeze
Txt Stop		Stop / Hold
Tone-		<< / Tune-
Tone+		>> / Tune+
Contrast-		l<< / Preset-
Contrast+		>>l / Preset+
Color- S.Std		Sound / Title
Menu audio		Audio / Lang I/II
Subt.List		Subtitle / EQ
4.# 16:9		Picture / Format
Txt Expand		Zoom / Size
Sleep Timer		Sleep / Timer
Return TV		TV/Radio /
Menu video		D.Menu / Top

Originalfernbedienung Ersatzfernbedienung







Store Text		Setup / OPT /
Text		Text / Goto
TV/AV		AV / Input / RDS
Menu		Menu / Home
Menu Up		Up
Info		Info / Angle
Menu Left		Left
OK Enter		OK
Menu Right		Right
Menu Off		Exit / Cancel / Clear
Menu Down		Down
Back		Back / Return
Volume+		Vol+
Chan.Up		CH+ / Page+
Volume-		Vol-
Display		Display / Media
Chan.Down		CH- / Page-



Originalfernbedienung    Ersatzfernbedienung

1		1
2		2
3		3
4		4
5		5
6		6
7		7
8		8
9		9
Guide -/-- 1.		Guide / EPG / -/--
0/10		0
2.Fav P/C 2.		Fav / Marker / PC
Red		Red / Netflix / Search
Green		Green / APP / Repeat
Yellow		Yellow / YouTube / Repeat
Blue		Blue / Prime Video / Random
Nicam/Mono		 Shift + Audio / Lang I/II

Originalfernbedienung    Ersatzfernbedienung

Level L	 + 	Shift + Left
Level R/Woofer	 + 	Shift + Right
Audio+	 + 	Shift + Vol+

