



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	V-Format		Format
	Mute		Mute
	F1		Shift + 1
	F2		Shift + 2
	TV/AV		AV
	Sleep		Sleep
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0

Originalfernbedienung Ersatzfernbedienung

	Fav		Pre Ch
	Pause		Pause
	Page+		Shift + Ch +
	Page-		Shift + Ch -
	←PR		Back
	Up / PR+		Ch +
	Up / PR+		Up
	Down / PR-		Ch -
	Down / PR-		Down
	Right / Vol+		Vol +
	Right / Vol+		Right
	Left / Vol-		Vol -
	Left / Vol-		Left
	OK / List		Ok
	OK / List		List
	Menu		Menu
	Exit		Exit





Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
	Info		Info
	EPG		Guide
	Red / Find		Red
	TV/Radio		TV/R
	Red / Find	+	Shift + TV/R
	Green / TXT		Green
	Green / TXT		Text
	Yellow / Subtitle		Yellow
	Yellow / Subtitle		Subt
	Blue / Audio		Blue
	Blue / Audio		Dual
	Record		Rec
	Play		Play
	Stop		Stop
	Shift		Smart
	<< Fast		<<
	Fast >>		>>
	< Slow		I<<
	Slow >		>>I





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	V-Format		Format
	Mute		Mute
	F1		Shift + 1
	F2		Shift + 2
	TV/AV		AV
	Sleep		Sleep
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0

 

 



 

 
 
 





 


Originalfernbedienung Ersatzfernbedienung

	Fav		Pre Ch
	Pause		Pause
	Page+		Shift + Ch +
	Page-		Shift + Ch -
	←PR		Back
	Up / PR+		Ch +
	Up / PR+		Up
	Down / PR-		Ch -
	Down / PR-		Down
	Right / Vol+		Vol +
	Right / Vol+		Right
	Left / Vol-		Vol -
	Left / Vol-		Left
	OK / List		Ok
	OK / List		List
	Menu		Menu
	Exit		Exit

 

 





Originalfernbedienung Ersatzfernbedienung

	Info		Info
	EPG		Guide
	Red / Find		Red
	TV/Radio		TV/R
	Red / Find	 + 	Shift + TV/R
	Green / TXT		Green
	Green / TXT		Text
	Yellow / Subtitle		Yellow
	Yellow / Subtitle		Subt
	Blue / Audio		Blue
	Blue / Audio		Dual
	Record		Rec
	Play		Play
	Stop		Stop
	Shift		Smart
	<< Fast		<<
	Fast >>		>>

Originalfernbedienung Ersatzfernbedienung

	< Slow		I<<
	Slow >		>>I

