 

 





 





 

 

 



 





 









Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	-/--		Shift + Guide / EPG / -/--
	0		0
	Recall		Back / Return
	EPG		Guide / EPG / -/--
	Subtitle		Subtitle / EQ
	Audio		Audio / Lang I/II

Originalfernbedienung Ersatzfernbedienung

	Display		Display / Media
	TV / Radio		TV/Radio /
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Down		Down
	Menu		Menu / Home
	Exit		Exit / Cancel / Clear
	FAV		Fav / Marker / PC
	Vol+		Vol+
	Auto		Eject / Surround
	CH+		CH+ / Page+
	Vol-		Vol-
	Aspect		Zoom / Size
	CH-		CH- / Page-
	Source		AV / Input / RDS



