



Originalfernbedienung Ersatzfernbedienung

	Standby		Power
	Subtitle		Subtitle / EQ
	Audio		Audio / Lang I / II
	Mute		Mute / Dimmer
	<<		<< / Tune-
	Play / Pause		Play / Slow
	Play / Pause		Pause / Step / Freeze
	I<<		I<< / Preset-
	>>		>> / Tune+
	Stop		Stop / Hold
	>>I		>>I / Preset+
	Menu		Menu / Home
	Up / CH+		Up
	Up / CH+		CH+ / Page+
	Exit		Exit / Cancel / Clear
	Left / Vol-		Left
	Left / Vol-		Vol-

Originalfernbedienung Ersatzfernbedienung

	OK		OK
	Right / Vol+		Vol+
	Right / Vol+		Right
	Record		Rec / Rec Mode
	Down / CH-		CH- / Page-
	Down / CH-		Down
	Timeshift		Sleep / Timer
	1		1
	2		2
	3		3
	--		Guide / EPG / -/-
	4		4
	5		5
	6		6
	Recall		Back / Return
	7		7
	8		8



