

 
 


 


 
 



Originalfernbedienung Ersatzfernbedienung

| | | |
|------------|---|-------|
| On/Off |  | Power |
| Mute |  | Mute |
| Return TV |  | TV/R |
| TV/AV |  | AV |
| Menu |  | Menu |
| Menu Up |  | Up |
| Menu Left |  | Left |
| OK Enter |  | Ok |
| Menu Right |  | Right |
| Menu Down |  | Down |
| Back |  | Back |
| Volume+ |  | Vol + |
| Chan.Up |  | Ch + |
| Volume- |  | Vol - |
| Chan.Down |  | Ch - |
| 1 |  | 1 |
| 2 |  | 2 |

Originalfernbedienung Ersatzfernbedienung

| | | |
|---------------|---|--------|
| 3 |  | 3 |
| 4 |  | 4 |
| 5 |  | 5 |
| 6 |  | 6 |
| 7 |  | 7 |
| 8 |  | 8 |
| 9 |  | 9 |
| Guide -/-- 1. |  | Guide |
| 0/10 |  | 0 |
| 2.Fav P/C 2. |  | Pre Ch |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |

