



Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|---------|---|----------------|
|  | Standby |  | Power |
|  | Mute |  | Mute |
|  | PMode |  | Shift + Format |
|  | SMode |  | Shift + Dual |
|  | Sleep |  | Sleep |
|  | Aspect |  | Format |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |
|  | 0 |  | 0 |
|  | Nicam |  | Dual |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|------------|---|---------------|
|  | Recall |  | Back |
|  | Rec List |  | Shift + Smart |
|  | Rec |  | Rec |
|  | Time Shift |  | Smart |
|  | Red |  | Red |
|  | Green |  | Green |
|  | Yellow |  | Yellow |
|  | Blue |  | Blue |
|  | Display |  | Info |
|  | Source |  | AV |
|  | Up |  | Up |
|  | Left |  | Left |
|  | Enter |  | Ok |
|  | Right |  | Right |
|  | Down |  | Down |
|  | Menu |  | Menu |
|  | Exit |  | Exit |





Originalfernbedienung Ersatzfernbedienung

| | | | |
|--|------------------|--|--------------|
| | Vol+ | | Vol + |
| | Vol- | | Vol - |
| | TV/Radio | | TV/R |
| | Subtitle | | Subt |
| | CH+ | | Ch + |
| | CH- | | Ch - |
| | Text | | Text |
| | Play/Pause / Rev | | Play |
| | Play/Pause / Rev | | Pause |
| | Hold | | Shift + Stop |
| | I<< / Index | | I<< |
| | Stop / Size | | Stop |
| | >>I / Sub.P | | >>I |
| | FAV | | Pre Ch |
| | >> | | >> |
| | << | | << |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|--|--|--|--|
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |

