


 





 
 




 



 

 

 

 





 






Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	Picture	 + 	Shift + Format
	Sound	 + 	Shift + Dual
	Aspect		Format
	Sleep		Sleep
	Subtitle		Subt
	CH.List		List
	--		Media
	FAV		Pre Ch
	TV/Radio		TV/R
	Input		AV
	Up		Up
	Left		Left
	OK		Ok
	Right		Right
	Down		Down

Originalfernbedienung Ersatzfernbedienung

	Menu		Menu
	Exit		Exit
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Recall		Back
	Display		Info
	Vol+		Vol +
	Vol-		Vol -
	CH+		Ch +





Originalfernbedienung Ersatzfernbedienung

	CH-		Ch -
	Play/Pause		Play
	Play/Pause		Pause
	Stop		Stop
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	TV/TXT		Text
	Cancel		Shift + Back
	Reveal		Smart
	Nicam / A2		Dual
	<< / Index		<<
	>> / Hold		>>
	I<< / Size		I<<
	>>I / Subpage		>>I

Originalfernbedienung Ersatzfernbedienung

