

 
 





 




Originalfernbedienung Ersatzfernbedienung

	Standby		Power
	Display		Shift + Info
	Nicam / Eject		Eject
	Mute		Mute
	P.Mode		Shift + Format
	S.Mode		Shift + Dual
	Sleep		Sleep
	Aspect		Format
	Vol -		Vol -
	Vol +		Vol +
	CH -		Ch -
	CH +		Ch +
	LCD-Menu		Menu
	DVD-Setup		Options
	Up		Up
	Left		Left
	Enter		Ok

Originalfernbedienung Ersatzfernbedienung

	Right		Right
	Down		Down
	Source		AV
	Exit		Exit
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Recall		Back
	Text / Audio		Text
	Hold / A-B / Rec List		Smart


 
 

 












Originalfernbedienung Ersatzfernbedienung

	Rec		Rec
	Time Shift		Media
	Red / Repeat		Red
	Red / Repeat	 + 	Shift + Text
	Green / Zoom		Green
	Green / Zoom	 + 	Shift + Eject
	Yellow / Angle		Yellow
	Blue / Goto		Blue
	Index / I<<<		I<<<
	Size / Stop		Stop
	Rev. / Play/Pause		Play
	Rev. / Play/Pause		Pause
	Sub.P / >>>I		>>>I
	TV/Radio / <<<		<<<
	TV/Radio / <<<		TV/R
	Lang / Menu		Dual
	Lang / Menu		D. Menu

Originalfernbedienung Ersatzfernbedienung

	I> Step	 + 	Shift + Pause
	>>		>>
	Subtitle		Subt
	EPG / Program		Guide
	FAV		Pre Ch
	EPG / Program	 + 	Shift + Sleep
	Info / Title		Info

