


 



 





 


 





 
 

 

 

















Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	[<>]		Format
	♪		Dual
	[ ]		3D
	PAT		Smart
	PIP Sel		Play
	PIP Pos		Pause
	PIP Size		Stop
	AV		AV
	PC		Media
	TV		TV/R
	1		1
	2		2
	3		3
	4		4
	5		5

Originalfernbedienung Ersatzfernbedienung

	6		6
	7		7
	8		8
	9		9
	0		0
	Zoom		Eject
	Swap		Pre Ch
	Swap		Back
	PR-		Ch -
	PR+		Ch +
	Vol-		Vol -
	Vol+		Vol +
	Up		Up
	Right		Right
	Down		Down
	Left		Left
	OK / Freeze		Ok





Originalfernbedienung    Ersatzfernbedienung

	Info		Info
	Menu		Menu
	[+]		Options
	[?]		D. Menu
	[♦]		Subt
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	Text / Mix		Text
	[≡x]		Exit
	[≡≡]		Guide

Originalfernbedienung    Ersatzfernbedienung