



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	-/--		Guide / EPG / -/--
	AV		AV / Input / RDS
	Menu		Menu / Home
	Swap		Back / Return
	OK		OK

Originalfernbedienung Ersatzfernbedienung

	Up		Up
	PR+		CH+ / Page+
	PR-		CH- / Page-
	Down		Down
	Right		Right
	Vol+		Vol+
	Left		Left
	Vol-		Vol-
	TV/TX		Text / Goto
	PP		Fav / Marker / PC
	16:9		Setup / OPT /
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	Violet		Display / Media
	[] Smart Controls		Picture / Format





Originalfernbedienung Ersatzfernbedienung

Originalfernbedienung	Ersatzfernbedienung
 Smart Controls	 Sound / Title
 MIX/))·(( Audio / Lang I/II
 P100	 Sleep / Timer
 SUB	 Subtitle / EQ
 Update	 Zoom / Size
 Hold	 Stop / Hold
 Doub	 Eject / Surround
 REV	 TV/Radio /

Originalfernbedienung Ersatzfernbedienung

Originalfernbedienung	Ersatzfernbedienung

