





 

 





 

 




 
 
 
 






 

 



 




 
 
 
 
 
 
 
 

 
 
 






**Originalfernbedienung    Ersatzfernbedienung**

|   |           |   |               |
|---|-----------|---|---------------|
|    | AMP Power |    | Power         |
|    | CD Power  |  +  | Shift + Power |
|    | OPT1      |    | D. Menu       |
|    | Coax/CD   |    | Yellow        |
|    | OPT2      |    | Format        |
|    | Analog1   |    | Red           |
|    | Analog2   |    | Green         |
|    | iPod/USB  |    | Blue          |
|    | USB-DAC   |    | 3D            |
|    | I<<       |    | I<<           |
|   | Play      |   | Play          |
|  | Pause     |    | Pause         |
|  | >>I       |    | >>I           |
|  | Stop      |    | Stop          |
|  | Random    |    | Media         |
|  | Repeat    |    | Text          |
|  | Mode      |    | Subt          |

**Originalfernbedienung    Ersatzfernbedienung**



 


 




 




 
 






|   |        |   |         |
|---|--------|---|---------|
|    | Info   |    | Info    |
|    | Dimmer |    | Smart   |
|    | Vol+   |    | Vol +   |
|    | Vol-   |    | Vol -   |
|    | Mute   |    | Mute    |
|    | Up     |    | Up      |
|    | Down   |    | Down    |
|    | Right  |    | Right   |
|    | Left   |    | Left    |
|    | Enter  |    | Ok      |
|   | Back   |   | Back    |
|  | Setup  |  | Options |
|  | 1      |  | 1       |
|  | 2      |  | 2       |
|  | 3      |  | 3       |
|  | 4      |  | 4       |
|  | 5      |  | 5       |




 


 


 


 
 
 



 

 
 

 
 
 
 

 
 

 
 
 




**Originalfernbedienung    Ersatzfernbedienung**

|   |           |   |               |
|---|-----------|---|---------------|
|    | CD Power  |    | Power         |
|    | AMP Power |  +  | Shift + Power |
|    | OPT1      |    | D. Menu       |
|    | OPT2      |    | Format        |
|    | Coax/CD   |    | Yellow        |
|    | Analog1   |    | Red           |
|    | Analog2   |    | Green         |
|    | iPod/USB  |    | Blue          |
|    | USB-DAC   |    | 3D            |
|    | I<<       |    | I<<           |
|   | Play      |   | Play          |
|  | Pause     |    | Pause         |
|  | >>I       |    | >>I           |
|  | Stop      |    | Stop          |
|  | Random    |    | Media         |
|  | Repeat    |    | Text          |
|  | Mode      |    | Subt          |

**Originalfernbedienung    Ersatzfernbedienung**

|   |        |   |         |
|---|--------|---|---------|
|    | Info   |    | Info    |
|    | Dimmer |    | Smart   |
|    | Vol+   |    | Vol +   |
|    | Vol-   |    | Vol -   |
|    | Mute   |    | Mute    |
|    | Up     |    | Up      |
|    | Down   |    | Down    |
|    | Right  |    | Right   |
|    | Left   |    | Left    |
|    | Enter  |    | Ok      |
|   | Back   |   | Back    |
|  | Setup  |  | Options |
|  | 1      |  | 1       |
|  | 2      |  | 2       |
|  | 3      |  | 3       |
|  | 4      |  | 4       |
|  | 5      |  | 5       |





