




Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|--------------|---|---------------------------|
|  | TV |  | Shift + 1 |
|  | AV.SV |  | AV / Input / RDS |
|  | SCART1 |  | Shift + 3 |
|  | PC |  | Shift + Fav / Marker / PC |
|  | SCART2 |  | Shift + 2 |
|  | Mute |  | Mute / Dimmer |
|  | Up / P+ |  | Up |
|  | Up / P+ |  | CH+ / Page+ |
|  | Exit |  | Exit / Cancel / Clear |
|  | Left / Vol- |  | Left |
|  | Left / Vol- |  | Vol- |
|  | Menu / Enter |  | OK |
|  | Menu / Enter |  | Menu / Home |
|  | Right / Vol+ |  | Right |
|  | Right / Vol+ |  | Vol+ |
|  | Down / P- |  | Down |
|  | Down / P- |  | CH- / Page- |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|--------|---|-----------------------------|
|  | Text |  | Text / Goto |
|  | Red |  | Red / Netflix / Search |
|  | Yellow |  | Yellow / YouTube / Repeat |
|  | Blue |  | Blue / Prime Video / Random |
|  | Green |  | Green / APP / Repeat |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |
|  | +100 |  | Guide / EPG / -/- |
|  | 0 |  | 0 |
|  | RTN |  | Back / Return |



