

 

 

 

 


 

 


 

 












 


 













Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|--------|---|--------|
|  | Power |  | Power |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |
|  | 0 |  | 0 |
|  | Red/M |  | Red |
|  | Green |  | Green |
|  | Yellow |  | Yellow |
|  | Blue |  | Blue |
|  | Up |  | Up |
|  | Down |  | Down |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|-------------|---|---------|
|  | Right |  | Right |
|  | Left |  | Left |
|  | OK |  | Ok |
|  | PR+ |  | Ch + |
|  | PR- |  | Ch - |
|  | Vol+ |  | Vol + |
|  | Vol- |  | Vol - |
|  | Menu |  | Menu |
|  | TV |  | TV/R |
|  | Video |  | AV |
|  | L/? |  | Guide |
|  | L/? |  | Dual |
|  | PC |  | Pre Ch |
|  | Text |  | Text |
|  | F[+] |  | 3D |
|  | Hold/Freeze |  | Format |
|  | M/S |  | Options |





Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|-----------|---|-----------|
|  | Mute |  | Mute |
|  | PIP |  | Media |
|  | Auto/Page |  | Smart |
|  | i |  | Info |
|  | Timer/Mix |  | Subt |
|  | F1 |  | Shift + 1 |
|  | F2 |  | Shift + 2 |
|  | F3 |  | Shift + 3 |
|  | F4 |  | Shift + 4 |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |

Originalfernbedienung Ersatzfernbedienung

| | |
|--|--|
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |

