










**Originalfernbedienung Ersatzfernbedienung**














 



 
 

 


Power		Power
Sleep		Sleep / Timer
Mute		Mute / Dimmer
Mode		AV / Input / RDS
1		1
2		2
3		3
Eject/Nicam2		Eject / Surround
Eject/Nicam2		Sound / Title
4		4
5		5
6		6
TXT/MIX		Text / Goto
Play/Pause		Play / Slow
Play/Pause		Pause / Step / Freeze
7		7
8		8

**Originalfernbedienung Ersatzfernbedienung**









 


 



9		9
Stop/Exit/Cancel		Exit / Cancel / Clear
Stop/Exit/Cancel		Stop / Hold
-/--		Guide / EPG / -/--
0		0
Back		Back / Return
SYS Menu		Menu / Home
Rec		Rec / Rec Mode
Up		Up
CH+		CH+ / Page+
DTV/Radio		TV/Radio /
Left		Left
Enter		OK
Right		Right
Vol-		Vol-
Down		Down
CH-		CH- / Page-



**Originalfernbedienung Ersatzfernbedienung**















Vol+		Vol+
Return	 + 	Shift + Back / Return
Menu DVD		D.Menu / Top
Setup		Setup / OPT /
Display		Display / Media
Search/FAV	 + 	Shift + Red / Netflix /
Search/FAV		Fav / Marker / PC
Slow/EPG	 + 	Shift + Play /
Slow/EPG	 + 	Shift + Guide / EPG / --
Language/Info		Audio / Lang I/II
Language/Info		Info / Angle
Zoom/List		Zoom / Size
Zoom/List		Smart / List
Red/Angle		Red / Netflix / Search
Red/Angle	 + 	Shift + Info / Angle
Green/Program		Green / APP / Repeat
Green/Program	 + 	Shift + TV/Radio / Program

**Originalfernbedienung Ersatzfernbedienung**

Yellow/Repeat	 + 	Shift + Green / APP / Repeat
Yellow/Repeat		Yellow / YouTube / Repeat
Blue/A-B		Blue / Prime Video / Random
Blue/A-B	 + 	Shift + Yellow / YouTube /
<</Hold	 + 	Shift + Stop /
<</Hold		<< / Tune-
>>/Index		>> / Tune+
<</Size		<< / Preset-
<</Size	 + 	Shift + Zoom /
>> /Reveal		>>  / Preset+
Subtitle		Subtitle / EQ
Title/Subpage	 + 	Shift + Sound / Title
FAV-	 + 	Shift + Down
FAV+	 + 	Shift + Up



**Originalfernbedienung Ersatzfernbedienung**






Standby		Power
Auto / Eject		Eject / Surround
Mute		Mute / Dimmer
P.Mode		Picture / Format
S.Mode		Sound / Title
Info		Info / Angle
Nicam		Audio / Lang I/II
1		1
2		2
3		3
Menu		Menu / Home
4		4
5		5
6		6
Exit / D.Setup		Setup / OPT /
Exit / D.Setup		Exit / Cancel / Clear
7		7

**Originalfernbedienung Ersatzfernbedienung**



 

 
 



 
 
8		8
9		9
Input		AV / Input / RDS
0		0
Recall		Back / Return
Sleep		Sleep / Timer
Up		Up
Left		Left
Enter		OK
Right		Right
Down		Down
CH-		CH- / Page-
CH+		CH+ / Page+
Vol-		Vol-
Vol+		Vol+
Text / Slow		Text / Goto
Text / Slow		Shift + Play / Slow



**Originalfernbedienung   Ersatzfernbedienung**

Hold / Play/Pause		Play / Slow
Hold / Play/Pause	 + 	Shift + Stop /
Hold / Play/Pause		Pause / Step / Freeze
Page+ / Stop		Stop / Hold
Page+ / Stop	 + 	Shift + CH+ /
Page- / Zoom		Zoom / Size
Page- / Zoom	 + 	Shift + CH- /
[≡i] / I<<		I<< / Preset-
[≡□] / >>I		>>I / Preset+
[≡?] / <<<		<<< / Tune-
[≡●] / >>>		>>> / Tune+
EPG / D.Menu		D.Menu / Top
EPG / D.Menu		Guide / EPG / -/--
FAV / D.Title	 + 	Shift + Sound / Title
FAV / D.Title		Fav / Marker / PC
FAV- / D.Disp		Display / Media
FAV- / D.Disp	 + 	Shift + Down

**Originalfernbedienung   Ersatzfernbedienung**


FAV+ / Goto	 + 	Shift + Up
FAV+ / Goto	 + 	Shift + Text /
Red / D.Prog		TV/Radio /
Red / D.Prog		Red / Netflix / Search
Green / Step	 + 	Shift + Pause / Step /
Green / Step		Green / APP / Repeat
Yellow / RPT	 + 	Shift + Green / APP /
Yellow / RPT		Yellow / YouTube / Repeat
Blue / A-B	 + 	Shift + Yellow / YouTube /
Blue / A-B		Blue / Prime Video / Random
List / Angle	 + 	Shift + Info / Angle
List / Angle		Smart / List
SUB-T		Subtitle / EQ
Aspect	 + 	Shift + Picture / Format
Rec		Rec / Rec Mode



**Originalfernbedienung Ersatzfernbedienung**

Standby		Power
Auto		Smart / List
Mute		Mute / Dimmer
1		1
2		2
3		3
4		4
5		5
6		6
7		7
8		8
9		9
-/--	 + 	Shift + Guide / EPG / -/--
0		0
Recall		Back / Return
Vol+		Vol+
Aspect	 + 	Shift + Picture / Format

**Originalfernbedienung Ersatzfernbedienung**

Audio		Audio / Lang I/II
CH+		CH+ / Page+
Vol-		Vol-
Display		Display / Media
CH-		CH- / Page-
Up		Up
Left		Left
OK		OK
Right		Right
Menu		Menu / Home
Down		Down
Exit		Exit / Cancel / Clear
Input		AV / Input / RDS
P.Mode		Picture / Format
S.Mode		Sound / Title
Sleep		Sleep / Timer
FAV		Fav / Marker / PC














Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
FAV-	 + 	Shift + CH- /	 + 
FAV+	 + 	Shift + CH+ /	 + 
EPG		Guide / EPG / -/-	
Text		Text / Goto	
Hold	 + 	Shift + Stop /	 + 
Tv/Radio		TV/Radio /	
Subtitle		Subtitle / EQ	
Index		Info / Angle	
Size		Zoom / Size	
Reveal		Setup / OPT /	
Subpage		Eject / Surround	
Media	 + 	Shift + Display / Media	 + 
Play		Play / Slow	
Pause		Pause / Step / Freeze	
<<		<< / Tune-	
>>		>> / Tune+	
Rec		Rec / Rec Mode	
Stop		Stop / Hold	
I<<		I<< / Preset-	
>>I		>>I / Preset+	
Red		Red / Netflix / Search	
Green		Green / APP / Repeat	
Yellow		Yellow / YouTube / Repeat	
Blue		Blue / Prime Video / Random	



**Originalfernbedienung   Ersatzfernbedienung**

On/Off		Power
Mute		Mute / Dimmer
Txt Stop		Stop / Hold
Info		Rec / Rec Mode
Sleep Timer		Picture / Format
Text		Setup / OPT /
TV/AV		AV / Input / RDS
Menu		Menu / Home
Menu Up		Up
Menu Left		Left
OK Enter		OK
Menu Right		Right
Menu Off		Exit / Cancel / Clear
Menu Down		Down
Volume+		Vol+
Chan.Up		CH+ / Page+
Volume-		Vol-

**Originalfernbedienung   Ersatzfernbedienung**

Chan.Down		CH- / Page-
1		1
2		2
3		3
4		4
5		5
6		6
7		7
8		8
9		9
Guide -/-- 1.		Guide / EPG / -/--
0/10		0
2.Fav P/C 2.		Fav / Marker / PC

