 







Originalfernbedienung Ersatzfernbedienung

	Mode		Smart
	Store		Red
	Mono / Stereo		Dual
	Display Tuner		Shift + Info
	RDS		Green
	Signal		Yellow
	Local / DX		Media
	Tune +		Ch +
	Tune -		Ch -
	PHONO		Shift + 1
	TUNER		Shift + 2
	CD		Shift + 3
	AUX 1		Shift + 4
	TAPE		Shift + 5
	AUX 2		Shift + 6
	Mute		Mute
	Volume +		Vol +

Originalfernbedienung Ersatzfernbedienung

	Volume -		Vol -
	Open / Close		Eject
	Clear		Exit
	+10		Guide
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Check		Options
	Intro		Subt
	Program		Sleep





Originalfernbedienung Ersatzfernbedienung

	Time		AV
	A / B		TV/R
	Autospace		Ok
	Repeat		Text
	Shuffle		Format
	Display CD Player		Info
	<< / Search -		<<
	>> / Search +		>>
	I<< / Track -		I<<
	>>I / Track +		>>I
	Stop		Stop
	Pause / Play		Play
	Pause / Play		Pause

Originalfernbedienung Ersatzfernbedienung

