
 






 

 









 



 


































 
 




Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	Menu		Menu
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	SURR / Set Up		Options
	Test / Title		Text
	Up / Volume +		Vol +
	Up / Volume +		Up

Originalfernbedienung Ersatzfernbedienung

	Down / Volume		Down
	Down / Volume		Vol -
	Right / Tune Up		Right
	Left / Tune Down		Left
	Enter		Ok
	Sleep		Sleep
	Video 1		Shift + 1
	Video 2		Shift + 2
	Video 3		Shift + 3
	Video 4		Shift + 4
	Video 5		Shift + 5
	CD		Shift + 6
	FM		Shift + 8
	Tape		Shift + 7
	AM		Shift + 9
	EXT 5.1		Shift + 0

