

 




 



 



 

 






 



 


 
 

 
 
 
 
 
 
 

 
 



 
 
 
 

 
 

 



 

 
 
 





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Mark		Pre Ch
	Tv/Radio		TV/R
	Source		AV
	Info		Info
	Timeshift		D. Menu

 









 

 



 

 
 

 
 
 
 

 
 




Originalfernbedienung Ersatzfernbedienung

	Recall		Back
	Menu		Menu
	Exit		Exit
	Text		Text
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	EPG		Guide
	Stop		Stop
	Play		Play
	Pause		Pause
	Rec		Rec
	<<		<<
	>>		>>
	I<<		I<<





**Originalfernbedienung    Ersatzfernbedienung**

	>>I		>>I
	Audio/Lang		Dual
	Page Up		Smart
	Page Down		Media
	Vol+		Vol +
	Vol-		Vol -
	CH+		Ch +
	CH-		Ch -
	HDMI		3D
	Zoom		Eject
	Subtitle		Subt
	Goto		Options
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue

**Originalfernbedienung    Ersatzfernbedienung**