




 




 


 
 

 
 

 

 


 
 



**Originalfernbedienung Ersatzfernbedienung**

	Standby		Power
	Menu		Menu
	Title		Options
	Setup		Sleep
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	>>		>>
	<<		<<
	>>		>>
	<<<		<<<
	Subtitle		Subt
	Angle		Guide
	Audio		Dual
	Play		Play
	Display		Info

**Originalfernbedienung Ersatzfernbedienung**

	Search		TV/R
	Stop		Stop
	Pause		Pause
	Repeat		Text
	Zoom		Shift + Eject
	Slow		Eject
	A-B		Shift + Play
	Vol+		Vol +
	Vol-		Vol -
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8





Originalfernbedienung   Ersatzfernbedienung

Originalfernbedienung	Ersatzfernbedienung
9	9
0	0

Originalfernbedienung   Ersatzfernbedienung

Originalfernbedienung	Ersatzfernbedienung

