



 









 














 



 



 









 





 








 

 





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	3D		Shift + 3
	Input TV		Shift + AV / Input / RDS
	Input AV		AV / Input / RDS
	Menu		Menu / Home
	Aspect		Picture / Format
	N		D.Menu / Top
	Surround		Eject / Surround
	i		Info / Angle
	Exit		Exit / Cancel / Clear
	Viera Tools		Display / Media
	Internet		Smart / List
	Up		Up
	Guide		Guide / EPG / -/--
	Left		Left
	OK		OK
	Right		Right

Originalfernbedienung Ersatzfernbedienung

	Options		Setup / OPT /
	Down		Down
	Return/Back		Back / Return
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	Text		Text / Goto
	Still		Shift + Pause / Step /
	Index		TV/Radio /
	Hold		Shift + Stop /
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6





Originalfernbedienung Ersatzfernbedienung

	7		7
	8		8
	9		9
	Mute		Mute / Dimmer
	0		0
	Last View		Fav / Marker / PC
	Vol+		Vol+
	CH+ / Page+		CH+ / Page+
	Vol-		Vol-
	CH- / Page-		CH- / Page-
	Second Power		Shift + Power
	Programme ▼		Shift + CH- /
	Programme ▲		Shift + CH+ /
	<<		<< / Tune-
	Play		Play / Slow
	>>		>> / Tune+
	Stop		Stop / Hold

Originalfernbedienung Ersatzfernbedienung

	Pause/II>		Pause / Step / Freeze
	Rec		Rec / Rec Mode

