


 
 


 

 

 



 
 










 










Originalfernbedienung Ersatzfernbedienung

	Power		Power
	AUX		Shift + 1
	AUX		Red
	TUNER / BAND		Shift + 2
	TUNER / BAND		Shift + TV/R
	TUNER / BAND		Green
	DVD / CD		Shift + 3
	DVD / CD		Blue
	TV		Yellow
	TV		Shift + 4
	TV		TV/R
	VCR		Shift + 5
	Volume+		Vol +
	Volume-		Vol -
	Muting		Mute
	1 / Disc 1		1
	2 / Disc 2		2

Originalfernbedienung Ersatzfernbedienung

	3 / Disc 3		3
	4 / Disc 4		4
	5 / Disc 5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	≥10 / -/-		Guide
	Disc		Pre Ch
	Pause		Pause
	<< Slow/Search		<<
	Slow/Search >>		>>
	Play		Play
	I<< Skip		I<<
	Stop		Stop
	Skip >>I		>>I



