



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Input		AV / Input / RDS
	Display		Display / Media
	Surround		Eject / Surround
	Mute		Mute / Dimmer
	Vol-		Vol-
	Vol+		Vol+
	N		Menu / Home
	Up		Up
	R		Info / Angle
	Left		Left
	Stop / Enter		Stop / Hold
	Stop / Enter		OK
	Right		Right
	Down		Down
	Picture		Picture / Format
	Sound		Sound / Title

Originalfernbedienung Ersatzfernbedienung

	Set Up		Setup / OPT /
	Picture Pos/Size		Zoom / Size
	Aspect		Shift + Picture / Format
	Aspect		D.Menu / Top
	PC		Fav / Marker / PC
	PC		Back / Return
	Off Timer		Sleep / Timer

