



 

 





 

























**Originalfernbedienung    Ersatzfernbedienung**

	DVD/VHS Power		Power
	TV Power		Shift + Power
	TV CH +		Shift + CH+ /
	TV Volume +		Vol+
	Drive Select		Picture / Format
	TV AV		Shift + AV / Input / RDS
	TV CH -		Shift + CH- /
	TV Volume -		Vol-
	1		1
	2		2
	3		3
	CH + / Tracking/V-Lock +		CH+ / Page+
	4		4
	5		5
	6		6
	CH - / Tracking/V-Lock -		CH- / Page-
	7		7

**Originalfernbedienung    Ersatzfernbedienung**

	8		8
	9		9
	VIDEO Plus+		TV/Radio /
	* / Reset		Fav / Marker / PC
	0		0
	Input Select		AV / Input / RDS
	Delete		Exit / Cancel / Clear
	I<<		I<< / Preset-
	>>I		>>I / Preset+
	<<		<< / Tune-
	>>		>> / Tune+
	Stop		Stop / Hold
	Pause		Pause / Step / Freeze
	Play		Play / Slow
	i		Info / Angle
	Prog Check		Setup / OPT /
	Guide		Guide / EPG / -/-





**Originalfernbedienung Ersatzfernbedienung**

	Direct Navigator		D.Menu / Top
	Left / <II		Left
	Up		Up
	Enter / OK		OK
	Right / II>		Right
	Functions		Menu / Home
	Sub Menu		Smart / List
	Down		Down
	Return		Back / Return
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow / Create Chapter		Yellow / YouTube / Repeat
	Blue / Manual		Blue / Prime Video / Random
	Rec		Rec / Rec Mode
	Rec Mode		Shift + Rec / Rec Mode
	Ext Link		Sound / Title
	Direct TV Rec		Zoom / Size

**Originalfernbedienung Ersatzfernbedienung**

	Text		Text / Goto
	STTL		Subtitle / EQ
	Display		Display / Media
	Time Slip / << Jet Rew		Shift + << /

