

 

 





 

 








 

 






 

 

 





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Tv/Radio		TV/Radio /
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	FAV		Fav / Marker / PC
	Text		Text / Goto
	Hold	 + 	Shift + Stop /
	TVG		Guide / EPG / -/--
	Subtitle		Subtitle / EQ
	Size		Zoom / Size
	Aspect	 + 	Shift + Picture / Format
	Media		Smart / List
	Subpage		Eject / Surround
	Play		Play / Slow
	Pause		Pause / Step / Freeze

Originalfernbedienung Ersatzfernbedienung

	<<		<< / Tune-
	>>		>> / Tune+
	Rec		Rec / Rec Mode
	Stop		Stop / Hold
	I<<		I<< / Preset-
	Sleep		Sleep / Timer
	>>I/Index		>>I / Preset+
	Audio		Audio / Lang I/II
	Menu		Menu / Home
	Exit		Exit / Cancel / Clear
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		OK
	Vol+		Vol+
	Vol-		Vol-





Originalfernbedienung Ersatzfernbedienung

	Mute		Mute / Dimmer
	Display		Display / Media
	CH+		CH+ / Page+
	CH-		CH- / Page-
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	-/--	+	Shift + Guide / EPG / -/--
	Recall		Back / Return
	Source		AV / Input / RDS

Originalfernbedienung Ersatzfernbedienung

	P.Mode		Picture / Format
	S.Mode		Sound / Title

