

















 

 










Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Tv/Radio		TV/Radio /
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	Subtitle		Subtitle / EQ
	Text		Text / Goto
	Hold		Shift +  Stop /
	TVG		Guide / EPG / -/--
	Audio		Audio / Lang I/II
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	Size		Zoom / Size
	<<		<< / Tune-
	Subpage		Eject / Surround
	>>		>> / Tune+

Originalfernbedienung Ersatzfernbedienung

	Rec		Rec / Rec Mode
	Stop		Stop / Hold
	I<<		I<< / Preset-
	FAV		Fav / Marker / PC
	>>I/Index		>>I / Preset+
	Menu		Menu / Home
	Up		Up
	Source		AV / Input / RDS
	Left		Left
	OK		OK
	Right		Right
	Down		Down
	Exit		Exit / Cancel / Clear
	Aspect		Picture / Format
	Vol+		Vol+
	Mute		Mute / Dimmer
	CH+		CH+ / Page+





Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
	Vol-		Vol-
	Display		Display / Media
	CH-		CH- / Page-
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	-/--		Shift + Guide / EPG / -/--
	0		0
	Recall		Back / Return

