




 



 








 
 



 

 
 
 
 
 



 

 





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	Up / CH +		Up
	Up / CH +		Ch +
	Down / CH -		Down
	Down / CH -		Ch -
	Right / Vol +		Right
	Right / Vol +		Vol +
	Left / Vol -		Left
	Left / Vol -		Vol -
	Menu		Menu
	Menu		Ok
	TV		Smart
	PC		Media
	1		1
	2		2
	3		3


 

 


Originalfernbedienung Ersatzfernbedienung

	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	-/--		Guide
	PRE		Pre Ch
	Picture		Format
	Scale		3D
	Memory		Text
	Auto		Options
	Display		Info
	Sleep		Sleep
	Brightness -		<<
	Brightness +		>>





Originalfernbedienung Ersatzfernbedienung

	DTV		TV/R
	Scart		Dual
	Video / S-Video		AV

Originalfernbedienung Ersatzfernbedienung

