 

 











 

 

 

 

 

 

 

 

 

 





Originalfernbedienung	Ersatzfernbedienung
 Power	 Power
 USB/Card	 AV / Input / RDS
 Display	 Display / Media
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Repeat	 Green / APP / Repeat
 A-B	 Yellow / YouTube / Repeat
 Goto	 Text / Goto

Originalfernbedienung	Ersatzfernbedienung
 10+	 Guide / EPG / -/--
 Title	 Sound / Title
 Stop	 Stop / Hold
 Setup	 Setup / OPT /
 Zoom	 Zoom / Size
 Audio	 Audio / Lang I/II
 Subtitle	 Subtitle / EQ
 Up	 Up
 Down	 Down
 Left	 Left
 Right	 Right
 OK	 OK
 Vol+	 Vol+
 Vol-	 Vol-
 Play/Pause	 Play / Slow
 <<	 << / Tune-
 >>	 >> / Tune+





Originalfernbedienung   Ersatzfernbedienung

	I <<		I << / Preset-
	>> I		>> I / Preset+
	LCD-Mode		Smart / List
	N/P		Back / Return
	Prog		TV/Radio /
	Menu/PBC		Menu / Home

Originalfernbedienung   Ersatzfernbedienung