










 


 









**Originalfernbedienung    Ersatzfernbedienung**

	Power		Power
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	-/--		Shift + Guide / EPG / -/--
	0		0
	Recall		Back / Return
	P.Mode		Picture / Format
	S.Mode		Sound / Title
	FAV		Fav / Marker / PC

**Originalfernbedienung    Ersatzfernbedienung**

	Vol+		Vol+
	MTS I/II		Audio / Lang I/II
	CH+		CH+ / Page+
	Vol-		Vol-
	Sub-T		Subtitle / EQ
	CH-		CH- / Page-
	SET		Smart / List
	Home		D.Menu / Top
	Mouse		Info / Angle
	Source		AV / Input / RDS
	Up		Up
	Display		Display / Media
	Left		Left
	OK		OK
	Right		Right
	Menu		Menu / Home
	Down		Down





 
 
 





Originalfernbedienung    Ersatzfernbedienung

	Exit		Exit / Cancel / Clear
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	<< / Text/CC		<< / Tune-
	<< / Text/CC		Text / Goto
	Play/Pause /		Play / Slow
	Play/Pause /		Pause / Step / Freeze
	>> / Reveal		>> / Tune+
	I<< / Hold		I<< / Preset-
	I<< / Hold		Shift + Stop /
	>>I / Size		>>I / Preset+
	>>I / Size		Zoom / Size
	Stop / Index		Stop / Hold
	Aspect		Shift + Picture / Format
	Freeze		Shift + Pause / Step / Freeze

Originalfernbedienung    Ersatzfernbedienung

	Sleep		Sleep / Timer
	T.Shift		TV/Radio /
	USB		Shift + 8
	EPG		Guide / EPG / -/--

