


 
 
 


 


 







 











 




**Originalfernbedienung Ersatzfernbedienung**

	VHS/DVD Power		Power
	Direct TV Rec		Subt
	VHS/DVD		Smart
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Cancel / Reset		Exit
	Input Select		Guide
	CH+ / Tracking/V-Lock+		Ch +
	CH- / Tracking/V-Lock-		Ch -


**Originalfernbedienung Ersatzfernbedienung**

	Create Chapter		TV/R
	I<< Skip		I<<
	Skip >>I		>>I
	REW / << Slow/Search		<<
	FF / Slow/Search		>>
	Stop		Stop
	Pause		Pause
	Play		Play
	Direct Navigator / Top Menu		D. Menu
	Functions		List
	Up		Up
	Left		Left
	Enter		Ok
	Right		Right
	Down		Down
	Sub Menu		Menu
	Return		Back







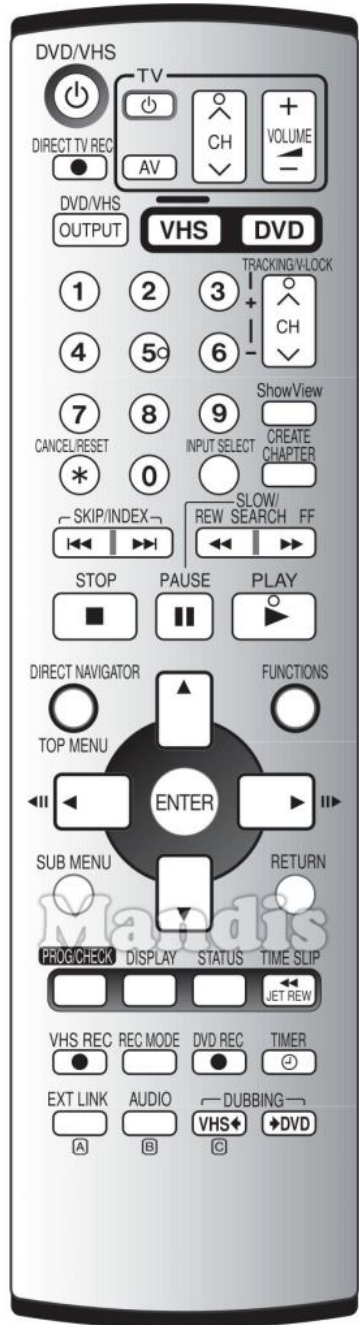

**Originalfernbedienung    Ersatzfernbedienung**

	VHS/DVD Power		Power
	Direct TV Rec		Subt
	VHS/DVD		Smart
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Cancel / Reset		Exit
	Input Select		AV
	CH+ / Tracking/V-Lock+		Ch +
	CH- / Tracking/V-Lock-		Ch -

**Originalfernbedienung    Ersatzfernbedienung**

	ShowView		Media
	I<< Index		I<<
	Index >>I		I>>
	REW		<<
	FF		>>
	Stop		Stop
	Pause		Pause
	Play		Play
	Up		Up
	Left		Left
	Enter		Ok
	Right		Right
	Down		Down
	Return		Back
	Prog/Check		Sleep
	Display		Info
	Jet Rew		Shift + <<



