



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Tv/Radio		TV/R
	←PR		Back
	EPG		Guide
	Menu		Menu
	Info		Info

Originalfernbedienung Ersatzfernbedienung

	Exit		Exit
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK/List		Ok
	PR+		Ch +
	PR-		Ch -
	Vol+		Vol +
	Vol-		Vol -
	↑		Smart
	↓		Media
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	Lang		Dual





Originalfernbedienung

Ersatzfernbedienung

	TXT		Text
	[...]		Subt
	Audio L/R		Options
	[+]		3D
	FAV		Pre Ch
	UHF		D. Menu
	Tv/AV		AV
	PAL/NTSC		Format
	Record		Rec
	Play		Play
	Pause		Pause
	Stop		Stop
	<<		<<
	>>		>>
	< Seek		l<<
	Seek >		>> l

Originalfernbedienung

Ersatzfernbedienung


