



**Originalfernbedienung    Ersatzfernbedienung**

	Power		Power
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Radio		TV/R
	Time Shift		3D
	Sleep		Sleep
	Rec		Rec
	Fav		Shift + Pre Ch

**Originalfernbedienung    Ersatzfernbedienung**

	Mouse		Shift + Media
	www		Media
	Back		Back
	Up		Up
	Left		Left
	OK		Ok
	Right		Right
	Down		Down
	Vol+		Vol +
	Vol-		Vol -
	Smart TV		Smart
	Home		Shift + Smart
	Refresh		D. Menu
	CH+		Ch +
	CH-		Ch -
	Red / <<		Red
	Red / <<		<<



