




**Originalfernbedienung    Ersatzfernbedienung**











 




 

 






	Power		Power
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Info		Info / Angle
	FAV		Fav / Marker / PC
	Page+		Shift + CH+ /
	Page-		Shift + CH- /
	Audio		Audio / Lang I/II

**Originalfernbedienung    Ersatzfernbedienung**

	Slow		Shift + Play /
	Menu		Menu / Home
	EPG		Guide / EPG / -/-
	Exit		Exit / Cancel / Clear
	Zoom		Zoom / Size
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	<<		<< / Tune-
	>>		>> / Tune+
	Rec		Rec / Rec Mode
	Stop		Stop / Hold
	UP		Up
	Down		Down
	Right		Right
	Left		Left
	OK		OK
	CH+		CH+ / Page+





Originalfernbedienung		Ersatzfernbedienung		Originalfernbedienung		Ersatzfernbedienung	
	CH-		CH- / Page-				
	Vol+		Vol+				
	Vol-		Vol-				
	TV/Radio		TV/Radio /				
	Teletext		Text / Goto				
	Subtitle		Subtitle / EQ				
	Return		Back / Return				
	Red		Red / Netflix / Search				
	Green		Green / APP / Repeat				
	Yellow		Yellow / YouTube / Repeat				
	Blue		Blue / Prime Video / Random				
	Navi		Display / Media				

