


 

 

 



 












Originalfernbedienung Ersatzfernbedienung

| | | | |
|-------------------------------------------------------------------------------------|------------|-------------------------------------------------------------------------------------|-------------------|
|  | Standby |  | Power |
|  | Open/Close |  | Eject / Surround |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | OSD |  | Display / Media |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | Audio |  | Audio / Lang I/II |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |
|  | Angle |  | Info / Angle |
|  | 10/0 |  | 0 |
|  | 10+ |  | Guide / EPG / -/- |
|  | Goto |  | Text / Goto |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---------------------------------------------------------------------------------------|----------|---------------------------------------------------------------------------------------|-----------------------|
|  | Subtitle |  | Subtitle / EQ |
|  | Setup |  | Setup / OPT / |
|  | Up |  | Up |
|  | Zoom |  | Zoom / Size |
|  | Left |  | Left |
|  | OK |  | OK |
|  | Right |  | Right |
|  | Title |  | Sound / Title |
|  | Down |  | Down |
|  | Menu |  | Menu / Home |
|  | L/R |  | CH+ / Page+ |
|  | Play |  | Play / Slow |
|  | Pause |  | Pause / Step / Freeze |
|  | Vol+ |  | Vol+ |
|  | Stop |  | Stop / Hold |
|  | Mute |  | Mute / Dimmer |
|  | N/P |  | CH- / Page- |





Originalfernbedienung Ersatzfernbedienung

| | | | |
|--|---------|--|---------------------------|
| | Step | | Shift + Pause / Step / |
| | Slow | | Shift + Play / |
| | Vol- | | Vol- |
| | Repeat | | Green / APP / Repeat |
| | A-B | | Yellow / YouTube / Repeat |
| | Prog | | TV/Radio / |
| | Return | | Back / Return |
| | << | | << / Tune- |
| | >> | | >> / Tune+ |
| | Clear | | Exit / Cancel / Clear |
| | DVD/USB | | AV / Input / RDS |
| | I<< | | I<< / Preset- |
| | >>I | | >>I / Preset+ |
| | HDMI | | Smart / List |
| | PBC | | Picture / Format |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|--|--|--|--|
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |

