





 

 





 

 





 









 
















 
 






 














Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|-------|---|-------------------|
|  | Power |  | Power |
|  | Input |  | AV / Input / RDS |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |
|  | Lang |  | Audio / Lang I/II |
|  | 0 |  | 0 |
|  | TXT |  | Text / Goto |
|  | V+ |  | Vol+ |
|  | Mute |  | Mute / Dimmer |
|  | P+ |  | CH+ / Page+ |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|-------------|---|------------------------------|
|  | V- |  | Vol- |
|  | Home |  | Menu / Home |
|  | P- |  | CH- / Page- |
|  | [G] |  | Guide / EPG / -/-- |
|  | i |  | Info / Angle |
|  | Up |  | Up |
|  | Left |  | Left |
|  | OK |  | OK |
|  | Right |  | Right |
|  | Back |  | Back / Return |
|  | Down |  | Down |
|  | Exit |  | Exit / Cancel / Clear |
|  | Netflix |  | Shift + Red / Netflix / |
|  | YouTube |  | Shift + Yellow / YouTube / |
|  | prime video |  | Shift + Blue / Prime |
|  | Rakuten Tv |  | TV/Radio / |
|  | twitch |  | Shift + Green / APP / Repeat |





Originalfernbedienung

Ersatzfernbedienung

| | | | |
|--|--------|--|-----------------------------|
| | *1 | | Setup / OPT / |
| | Red | | Red / Netflix / Search |
| | Green | | Green / APP / Repeat |
| | Yellow | | Yellow / YouTube / Repeat |
| | Blue | | Blue / Prime Video / Random |
| | << | | << / Tune- |
| | Pause | | Pause / Step / Freeze |
| | >> | | >> / Tune+ |
| | Rec | | Rec / Rec Mode |
| | Play | | Play / Slow |
| | Stop | | Stop / Hold |

Originalfernbedienung

Ersatzfernbedienung

| | | | |
|--|--|--|--|
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |

