




 

 

 

 



 

 

 

 

 

 



 

 




 




Originalfernbedienung    Ersatzfernbedienung

	Power		Power
	Source		AV
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Info		Info
	Recall		Pre Ch
	SS-Titre		Subt
	Accueil		D. Menu
	YouTube		Media

Originalfernbedienung    Ersatzfernbedienung

	Netflix		Smart
	Reg. Rapide		3D
	Menu		Menu
	Retour/Guide		Guide
	Sortie		Exit
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK/Liste		Ok
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute





Originalfernbedienung		Ersatzfernbedienung		Originalfernbedienung		Ersatzfernbedienung	
	CH+		Ch +				
	CH-		Ch -				
	I/II Audio/Lang		Dual				
	Play		Play				
	Pause/Index		Pause				
	Stop/Garde		Stop				
	Rec/Mix		Rec				
	I<<		I<<				
	Texte		Text				
	>>I		>>I				
	Taille		Format				
	<</Revele		<<				
	>>/Annule		>>				
	Heure/Pg Ht		List				
	SS-Code/Pg Bs		Sleep				

