



 

 












Originalfernbedienung Ersatzfernbedienung

|   |        |   |                             |
|---|--------|---|-----------------------------|
|    | Power  |    | Power                       |
|    | Red    |    | Red / Netflix / Search      |
|    | Green  |    | Green / APP / Repeat        |
|    | Yellow |    | Yellow / YouTube / Repeat   |
|    | Blue   |    | Blue / Prime Video / Random |
|    | Menu   |    | Menu / Home                 |
|    | P<P    |    | Smart / List                |
|    | Up     |    | Up                          |
|    | Left   |    | Left                        |
|    | Ok     |   | OK                          |
|  | Right  |  | Right                       |
|  | Down   |  | Down                        |
|  | AV     |  | AV / Input / RDS            |
|  | Tv/R   |  | TV/Radio /                  |
|  | Info   |  | Info / Angle                |
|  | I-II   |  | Audio / Lang I/II           |
|  | Vol+   |  | Vol+                        |

Originalfernbedienung Ersatzfernbedienung

|   |           |   |                            |
|---|-----------|---|----------------------------|
|    | P+        |    | CH+ / Page+                |
|    | Vol-      |    | Vol-                       |
|    | Mute      |    | Mute / Dimmer              |
|    | P-        |    | CH- / Page-                |
|    | 1         |    | 1                          |
|    | 2         |    | 2                          |
|    | 3         |    | 3                          |
|    | 4         |    | 4                          |
|    | 5         |    | 5                          |
|    | 6         |   | 6                          |
|  | 7         |  | 7                          |
|  | 8         |  | 8                          |
|  | 9         |  | 9                          |
|  | PP        |  | Back / Return              |
|  | 0         |  | 0                          |
|  | -/-- Exit |  | Exit / Cancel / Clear      |
|  | -/-- Exit |  | Shift + Guide / EPG / -/-- |



