 



 

 

 
 
 

 

 

 

 


 






















 
 

 












Originalfernbedienung Ersatzfernbedienung

	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	FAV		Pre Ch
	TXT		Text
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue

Originalfernbedienung Ersatzfernbedienung

	Guide		Guide
	?		Format
	Exit		Exit
	Menu		Menu
	Back		Back
	Tools		Options
	@		Smart
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	Vol +		Vol +
	Vol -		Vol -
	Mute		Mute
	Source		AV
	P +		Ch +





Originalfernbedienung		Ersatzfernbedienung		Originalfernbedienung		Ersatzfernbedienung	
	P -		Ch -				
	I <		I <<				
	> I / PIP		>> I				
	<<		<<				
	>>		>>				
	Rec		Rec				
	Play		Play				
	Pause		Pause				
	Stop		Stop				
	3D		3D				
	QO..		Dual				
	[...]..		Subt				
	Netflix		Shift + Media				
	My Media		Media				

