



Originalfernbedienung Ersatzfernbedienung

|  |                  |  |                   |
|--|------------------|--|-------------------|
|  | Standby          |  | Power             |
|  | 1/VCR/DVR        |  | 1                 |
|  | 2/CBL/SAT        |  | 2                 |
|  | 3/Game/TV        |  | 3                 |
|  | 4/AUX            |  | 4                 |
|  | 5/Multi CH       |  | 5                 |
|  | 6/DVD            |  | 6                 |
|  | 7/Tape           |  | 7                 |
|  | 8/Tuner          |  | 8                 |
|  | 9/CD             |  | 9                 |
|  | +10/10/-/-/D.Tun |  | Guide / EPG / -/- |
|  | 0/11/Dimmer      |  | 0                 |
|  | CLR/12/Sleep/Ent |  | Fav / Marker / PC |
|  | CH Disc          |  | CH+ / Page+       |
|  | CH Disc Album-   |  | CH- / Page-       |
|  | Vol+             |  | Vol+              |
|  | Vol-             |  | Vol-              |

Originalfernbedienung Ersatzfernbedienung










 
 
 

 

 

 


|  |                      |  |                       |
|--|----------------------|--|-----------------------|
|  | Up                   |  | Up                    |
|  | Previous Menu/Muting |  | Menu / Home           |
|  | Left/Playlist/Cat    |  | Left                  |
|  | Enter                |  | OK                    |
|  | Right/Playlist/Cat   |  | Right                 |
|  | Setup                |  | Setup / OPT /         |
|  | Down                 |  | Down                  |
|  | Return               |  | Back / Return         |
|  | Pause/<              |  | Pause / Step / Freeze |
|  | Play                 |  | Play / Slow           |
|  | Stop                 |  | Stop / Hold           |
|  | <<                   |  | << / Tune-            |
|  | >>                   |  | >> / Tune+            |
|  | Stereo               |  | Sound / Title         |
|  | Surround             |  | Eject / Surround      |
|  | < Listening Mode     |  | Shift + Left          |
|  | Listening Mode >     |  | Shift + Right         |







**Originalfernbedienung    Ersatzfernbedienung**

|   |                      |   |                   |
|---|----------------------|---|-------------------|
|    | Standby              |    | Power             |
|    | 1/VCR/DVR            |    | 1                 |
|    | 2/CBL/SAT            |    | 2                 |
|    | 3/Game/TV            |    | 3                 |
|    | 4/AUX                |    | 4                 |
|    | 5/Multi CH           |    | 5                 |
|    | 6/DVD                |    | 6                 |
|    | 7/Tape               |    | 7                 |
|    | 8/Tuner              |    | 8                 |
|    | 9/CD                 |    | 9                 |
|   | +10/10/-/-/D.Tun     |   | Guide / EPG / -/- |
|  | 0/11/Dimmer          |  | 0                 |
|  | CLR/12/Sleep/Ent     |  | Fav / Marker / PC |
|  | Guide/Top            |  | D.Menu / Top      |
|  | Up                   |  | Up                |
|  | Previous Menu/Muting |  | Menu / Home       |
|  | Left/Playlist/Cat    |  | Left              |

**Originalfernbedienung    Ersatzfernbedienung**







 

 



 



|   |                    |   |                       |
|---|--------------------|---|-----------------------|
|    | Enter              |    | OK                    |
|    | Right/Playlist/Cat |    | Right                 |
|    | Setup              |    | Setup / OPT /         |
|    | Down               |    | Down                  |
|    | Return             |    | Back / Return         |
|    | Pause/<            |    | Pause / Step / Freeze |
|    | Play               |    | Play / Slow           |
|    | Stop               |    | Stop / Hold           |
|    | <<                 |    | << / Tune-            |
|    | >>                 |    | >> / Tune+            |
|   | l<<                |   | l<< / Preset-         |
|  | >>l                |  | >>l / Preset+         |
|  | Stereo             |  | Sound / Title         |
|  | Surround           |  | Eject / Surround      |
|  | < Listening Mode   |  | CH- / Page-           |
|  | Listening Mode >   |  | CH+ / Page+           |
|  | Test Tone/Audio    |  | Audio / Lang I/II     |







**Originalfernbedienung Ersatzfernbedienung**

|   |                  |   |                   |
|---|------------------|---|-------------------|
|    | Standby          |    | Power             |
|    | 1/VCR/DVR        |    | 1                 |
|    | 2/CBL/SAT        |    | 2                 |
|    | 3/Game/TV        |    | 3                 |
|    | 4/AUX            |    | 4                 |
|    | 5/Multi CH       |    | 5                 |
|    | 6/DVD            |    | 6                 |
|    | 7/Tape           |    | 7                 |
|    | 8/Tuner          |    | 8                 |
|    | 9/CD             |    | 9                 |
|   | +10/10/-/-/D.Tun |   | Guide / EPG / -/- |
|  | 0/11/Dimmer      |  | 0                 |
|  | CLR/12/Sleep/Ent |  | Fav / Marker / PC |
|  | Disc/Album       |  | CH+ / Page+       |
|  | Disc/Album CH-   |  | CH- / Page-       |
|  | Vol+             |  | Vol+              |
|  | Vol-             |  | Vol-              |

**Originalfernbedienung Ersatzfernbedienung**

|   |                  |   |                             |
|---|------------------|---|-----------------------------|
|    | Pause/<          |    | Pause / Step / Freeze       |
|    | Play             |    | Play / Slow                 |
|    | Stop             |    | Stop / Hold                 |
|    | <<               |    | << / Tune-                  |
|    | >>               |    | >> / Tune+                  |
|    | <<               |    | << / Preset-                |
|    | >>               |    | >>  / Preset+               |
|    | Stereo           |    | Audio / Lang I/II           |
|    | Surround         |    | Eject / Surround            |
|    | < Listening Mode |    | Left                        |
|   | Listening Mode > |   | Right                       |
|  | Level-/Random    |  | Blue / Prime Video / Random |
|  | Level+/Repeat    |  | Green / APP / Repeat        |
|  | Display          |  | Display / Media             |
|   |                  |   |                             |
|   |                  |   |                             |
|   |                  |   |                             |



