








 

 
 

 






Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Menu		Menu / Home
	0		0
	Exit		Exit / Cancel / Clear
	Up / CH+		Up
	Up / CH+		CH+ / Page+
	Left / Vol-		Vol-


Originalfernbedienung Ersatzfernbedienung

	Left / Vol-		Left
	OK		OK
	Right / Vol+		Right
	Right / Vol+		Vol+
	Down / CH-		CH- / Page-
	Down / CH-		Down
	Page+		Smart / List
	Page+		Shift + CH+ /
	Page+		>> / Preset+
	Page-		Display / Media
	Page-		Shift + CH- /
	Page-		<< / Preset-
	Fav		Fav / Marker / PC
	Guide		Guide / EPG / -/-
	i		Info / Angle
	TV/Radio		TV/Radio /
	Last		Back / Return





Originalfernbedienung Ersatzfernbedienung

	Audio		Audio / Lang I/II
	Pause		Pause / Step / Freeze
	NTSC/PAL		Picture / Format
	NTSC/PAL		Setup / OPT /
	Sat	 +  0	Shift + 0
	Red / F1		Red / Netflix / Search
	Green / F2		Green / APP / Repeat
	Yellow / F3		Yellow / YouTube / Repeat
	Blue / F4		Blue / Prime Video / Random

Originalfernbedienung Ersatzfernbedienung

