













 







 











 













 



 







 











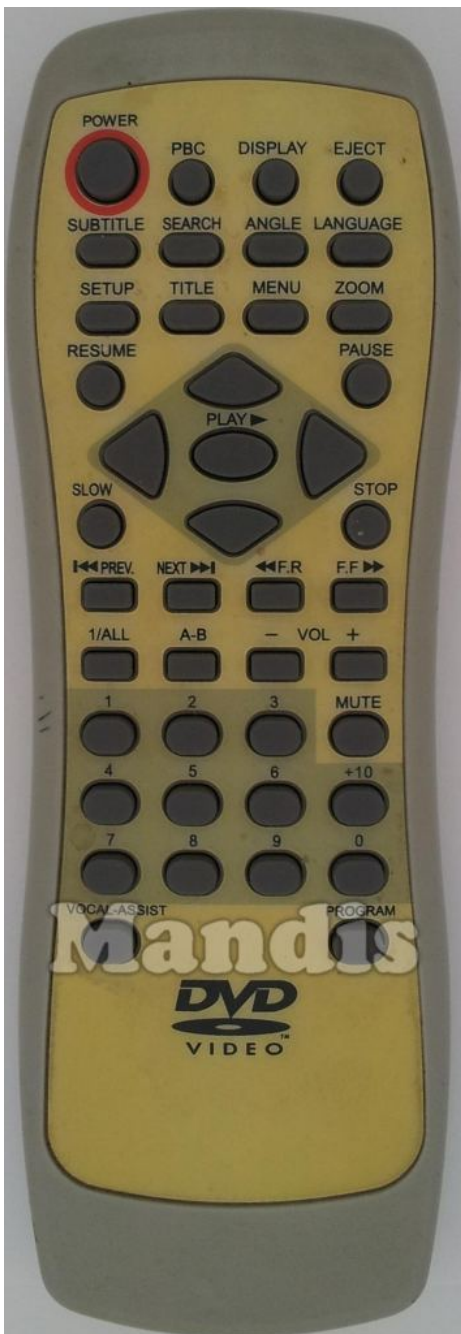
Originalfernbedienung Ersatzfernbedienung

	Power		Power
	PBC		Text / Goto
	Display		Display / Media
	Eject		Eject / Surround
	Subtitle		Subtitle / EQ
	Search		Red / Netflix / Search
	Angle		Info / Angle
	Language		Audio / Lang I/II
	Setup		Setup / OPT /
	Title		Sound / Title
	Menu		Menu / Home
	Zoom		Zoom / Size
	Resume		D.Menu / Top
	Up		Up
	Pause		Pause / Step / Freeze
	Left		Left
	OK		OK

Originalfernbedienung Ersatzfernbedienung

	Play		Play / Slow
	Right		Right
	Slow		Shift + Play /
	Down		Down
	Stop		Stop / Hold
	I<<		I<< / Preset-
	>>I		>>I / Preset+
	<<		<< / Tune-
	>>		>> / Tune+
	1/All		Smart / List
	A-B		Yellow / YouTube / Repeat
	Vol-		Vol-
	Vol+		Vol+
	1		1
	2		2
	3		3
	Mute		Mute / Dimmer





Originalfernbedienung Ersatzfernbedienung

	4		4
	5		5
	6		6
	+10		Guide / EPG / -/--
	7		7
	8		8
	9		9
	0		0
	Vocal-Assist		AV / Input / RDS
	Program		TV/Radio /

Originalfernbedienung Ersatzfernbedienung

